

FSD901 OPERATING INSTRUCTIONS

Alarm Operation

In case of alarm, the *Alarm* LED flashes, LCD displays alarm condition and the buzzer sounds. Local audible and visual signals and remote alarm signals operate.

When an alarm occurs, proceed according to the established emergency plan. Assure that all personnel are accounted for, and notify the Fire Department to advise of the alarm and/or verify that an automatic signal has been received at the Fire Department.

Authorized Personnel Only

To acknowledge the alarm:

To acknowledge the alarm, enable the control buttons by operating the keyswitch, and press the *Acknowledge* button. The local buzzer will be silenced and the *Alarm* LED will change from on-flashing to on-steady.

To silence the alarm:

To silence the notification appliances after evacuation, where permitted, press the *Alarm Silence* button. The silenceable notification appliances will be silenced, and LED indications will change from flashing to continuous. The *Alarm Silenced* LED will be lit.

Note: Do not reset the panel until the alarm has been cleared.

Warning: Alarm silence inhibit (if set) prevents the alarm from being silenced for a predetermined time.

To reset panel after alarm:

When the alarm condition is corrected, return the panel to normal standby operation by pressing the *Reset* button.

Trouble Operation

Trouble is indicated by:

Trouble LED flashes, LCD displays trouble conditions. Panel buzzer sounds (pulsing).

To acknowledge the trouble:

Enable the control buttons by operating the keyswitch, and press the *Acknowledge* button. The *Trouble* LED turns on-steady. When the trouble condition has been cleared, you may need to reset the panel to restore to a normal standby condition.

Warning: Devices in trouble condition may not report a fire alarm.

Event Scrolling

Viewing Events on the System:

Events are displayed in the system by event priority (Unacknowledged Alarm > Unacknowledged Supervisory > Unacknowledged Trouble > Acknowledged Alarm > Acknowledged Supervisory > Acknowledged Trouble > Status > Test) followed by event occurrence (latest to oldest event) in a circular list.

According to settings, some events can be suppressed (not display) on annunciator.

Normal Standby Condition

The green *AC Power On* LED will be lit and no other indicators on.

For service, contact: _____
Telephone Number: _____

Frame these instructions and mount them near the annunciator for operator reference.